

SVX-Series Solenoid Actuated Diesel Engine Air Shut Down Valves (Energised to Run Types for Non-Hazardous Areas)

Selection, Application, and Maintenance

Valve Numbers

SVX-300 and SVX-301
SVX-307 and SVX-308

SVX-500 and SVX-501
SVX-507 and SVX-508

SVX-800 and SVX-801
SVX-807 and SVX-808

Description

A range of 12 and 24 volt dc solenoid operated diesel engine air intake closure valves based on the standard Chalwyn slimfit 3", 5" and 8" butterfly valves. These products are available in basic flange mounted form but can also be supplied fitted with hose adaptors.




These valves are designed to fail safe in that if electrical power is lost for any reason, the valve will always revert to the closed condition.

All valves in this range are also available with fitted internal microswitch to enable status indication.

Typical Valve Arrangement for Types

SVX-300	SVX-301
SVX-307	SVX-308
SVX-500	SVX-501
SVX-507	SVX-508
SVX-800	SVX-801
SVX-807	SVX-808

Note: These valve types all require an external timer circuit to switch from "pull" to "hold" coils. See page 5.

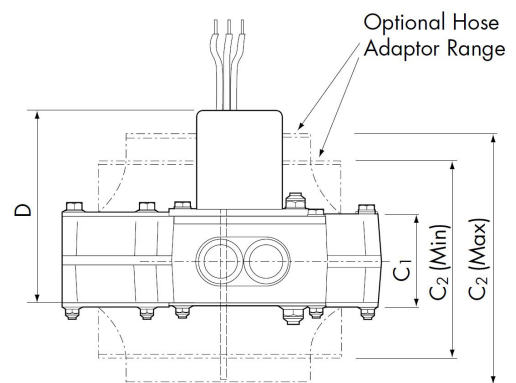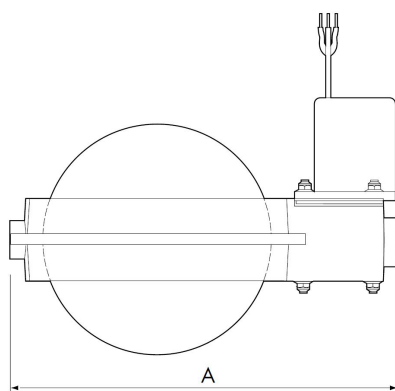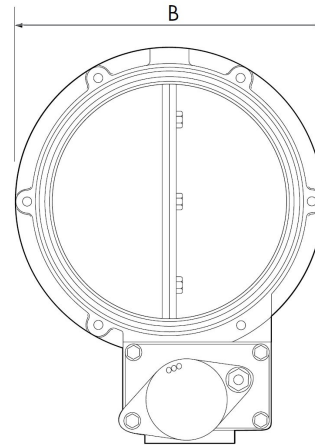

Valve Type		Voltage	Nominal Bore Diameter	A	B	C ₁	C ₂	D
Without Microswitch	With Microswitch							
SVX-300	SVX-308	12	76 (3")	161.0	111.5	37.5	82.5 to 112.5	95.5
SVX-301	SVX-307	24	76 (3")	161.0	111.5	37.5	82.5 to 112.5	95.5
SVX-500	SVX-508	12	127 (5")	217.0	167.5	45.5	102 to 157.5	99.5
SVX-501	SVX-507	24	127 (5")	217.0	167.5	45.5	102 to 157.5	99.5
SVX-800	SVX-808	12	203 (8")	317.5	257.0	56.0	136.5 to 185.5	104.5
SVX-801	SVX-807	24	203 (8")	317.5	257.0	56.0	136.5 to 185.5	104.5

Selection

Determine the size and position of the SVX valve to be installed. Within the various constraints imposed by the application, the valve should be as generously sized as possible. Check that the valve can be installed such that the electrical cable can be routed away without risk of damage.

Determine voltage of valve required and whether a two wire (internally switched) or three wire solenoid is required with external switching operated by a customer supplied timer circuit. If a valve status indicator is required, select a valve with an internal micro switch.

Chalwyn 'X' valves are designed for flange mounting. Alternatively these valves can be supplied with fitted hose adaptors selected from the table below.

76mm (3") Bore Valves	
Adaptor Part Number	To Suit Hose Bore mm (inches)
HAX-320	38 (1½)
HAX-322	44.5 (1¾)
HAX-301	51 (2)
HAX-302	54 (2⅛)
HAX-303	57 (2¼)
HAX-304	60 (2⅜)
HAX-305	63.5 (2½)
HAX-306	67 (2⅝)
HAX-307	70 (2¾)
HAX-308	73 (2⅞)
HAX-309	76 (3)
HAX-312	82.5 (3¼)
HAX-314	89 (3½)
HAX-319	102 (4)

127mm (5") Bore Valves	
Adaptor Part Number	To Suit Hose Bore mm (inches)
HAX-501	89 (3½)
HAX-502	92 (3⅝)
HAX-503	95 (3¾)
HAX-504	98 (3⅞)
HAX-505	102 (4)
HAX-506	105 (4⅛)
HAX-507	108 (4¼)
HAX-508	111 (4⅜)
HAX-509	114 (4½)
HAX-510	117.5 (4⅝)
HAX-511	121 (4¾)
HAX-512	124 (4⅞)
HAX-513	127 (5)
HAX-518	140 (5½)
HAX-523	152 (6)

203mm (8") Bore Valves	
Adaptor Part Number	To Suit Hose Bore mm (inches)
HAX-807	178 (7)
HAX-808	203 (8)

INSTALLATION (Mechanical)

1. In the case of a naturally aspirated engine, the Chalwyn SVX shut down valve should generally be fitted as close to the engine air intake manifold as possible. If an air intake flame trap is also fitted, the SVX valve must be installed upstream (air cleaner side) of the flame trap.

2. To avoid excessively high intake air temperature at the SVX valve when fitted to a turbocharged engine, it may be necessary to fit the valve either upstream of the turbocharger or downstream of the intercooler (if fitted). Again, if an air intake flametrap is also fitted, the valve must be installed upstream of the flametrap.

3. Where more than one SVX valve is installed on an engine, as in the case of an engine with multiple intake pipes, the shut down valve control system must be arranged to ensure all valves close simultaneously.

4. This valve may be installed either horizontally or vertically.

5. If hose adaptors are used, the mating hose should be of a reinforced type, provide adequate support for the valve and prevent excessive vibration. If necessary, additional support brackets mounted from the engine should be considered.

6. Particular care must be taken to ensure the integrity of the intake pipework between the Chalwyn valve and intake manifold. Ideally metal pipework should be used and any gaps kept as short as possible, (taking into account any relative movement) and closed by reinforced hose.

7. Any engine crankcase breather connections into the intake system between the SVX valve and engine, or any internal crankcase breather arrangement venting directly into the engine intake ports must be sealed and replaced by an external breather system venting either to atmosphere or to the intake system upstream of the shut down valve. External breather system kits for various en-

INSTALLATION (Electrical)

Valve Types **SVX-300, SVX-301, SVX-307, SVX-308**
SVX-500, SVX-501, SVX-507, SVX-508
SVX-800, SVX-801, SVX-807, SVX-808

The solenoids fitted to these non-hazardous area shut down valves are three wire (external switching) types. A timer device must be fitted in the solenoid supply circuit to rapidly switch from "pull" to "hold" connections after powering the solenoid (typically less than 1 second).

The control circuit for these devices must also incorporate an overload protection device and the supply cables must not exceed the following maximum lengths.

2.5mm² wire gauge : 2.7m (12 volt types) or 10m (24 volt types).

4.0mm² wire gauge : 4.2m (12 volt types) or 16m (24 volt types).

Supply voltage: 12 vdc (SVX-300, SVX-308, SVX-500, SVX-508, SVX-800, SVX-808) 24 vdc (SVX-301, SVX-307, SVX-501, SVX-507, SVX-801, SVX-807)

Pull current at 23°C : 46 amps (12 volt types) or 25 amps (24 volt types).

Hold current at 23°C : 1.1 amps (12 volt types) or 0.5 amps (24 volt types).

Pull coil: Must not be powered for more than three 30 second periods with 2 minutes to cool between each period. The solenoid must be allowed to cool to ambient before further energising of the pull coil.

The black wire is the common return and must be connected to the negative terminal of the supply. The white wire is the pull coil supply.

The red wire is the hold coil supply.

For models with an internal microswitch, the microswitch connections are made as follows: Brown : Supply - common.

Blue : Makes circuit when valve is open

Black : Makes circuit when valve is closed. (Was yellow/green on early models).

Maximum rating of microswitch at 12 or 24 volts = 2 amp.

OPERATION

When powered the solenoid holds the air intake shut down valve in the open (engine run) condition. On loss of power the spring within the shut down valve assembly moves the valve to the closed (engine stop) position, i.e. failure of power supply gives a fail safe (engine stopped) condition.

MAINTENANCE

When powered the solenoid holds the air intake shut down valve in the open (engine run) condition. On loss of power the spring within the shut down valve assembly moves the valve to the closed (engine stop) position, i.e. failure of power supply gives a fail safe (engine stopped) condition.

WEEKLY

Visually check the valve, solenoid and cable for damage or deterioration. Withdraw from service if significant damage or deterioration is observed.

MONTHLY

Check that the fasteners locating the shut down valve and any associated intake system or support bracket fasteners are securely tightened.

Check that any flexible hoses in the engine intake between the SVX valve and engine are free from damage and suitable for further service.

Run engine, preferably at low idle. Use shut down control system emergency stop to close the intake shut down valve. The engine should stop within a few seconds. If not, check there are no leaks in the engine air intake system between the SVX valve and engine. If this does not resolve the problem remove the SVX valve to return to Chalwyn for investigation.

Americas

AMOT - USA
Tel +1 (281) 940 1800
Fax +1 (713) 559 9419
customer.service@amot.com

AMOT - Canada
Tel +1 (780) 465 4429
Fax +1 (780) 469 6275
customer.service@amot.com

Asia Pacific

AMOT - China
Tel +86 21 6279 7700
Fax +86 21 5237 8560
shanghai@amot.com

Europe, Middle East and Africa

AMOT - England
Tel +44 (0) 1284 715739
Fax +44 (0) 1284 760256
sales@chalwyn.com

AMOT - Germany
Tel +49 (0) 40 8537 1298
Fax +49 (0) 40 8537 1331
germany@amot.com